




INSTALLATION INSTRUCTIONS

Part #	Description
HW-112	05+ FSD Axle - Pair of Brake Line Mounts and Hardware

10076 Streeter Road Suite #7, Auburn, CA 95602
Phone: 530.268.9494 www.wfoconcepts.com

HW-112

BILL OF MATERIALS	
C-51006	Qty. 2 - '05+ FSD Axle Brake Line Tab
26462	Qty. 2 - 5/16" Plastic Dipped P-Clip
Bolt, 1/4"	Qty. 2 - 1/4"-20x3/4" Bolt
Nylock nut	Qty. 2 - 1/4"-20 Nylock Nut
Bolt, M14	Qty. 2 - M14-2.0x20mm Bolt
Flat Washer	Qty. 2 - M14 Flat Washer
TOOLS NEEDED	
3/8" Drive Ratchet 7/16" Socket & Wrench 18mm Socket	

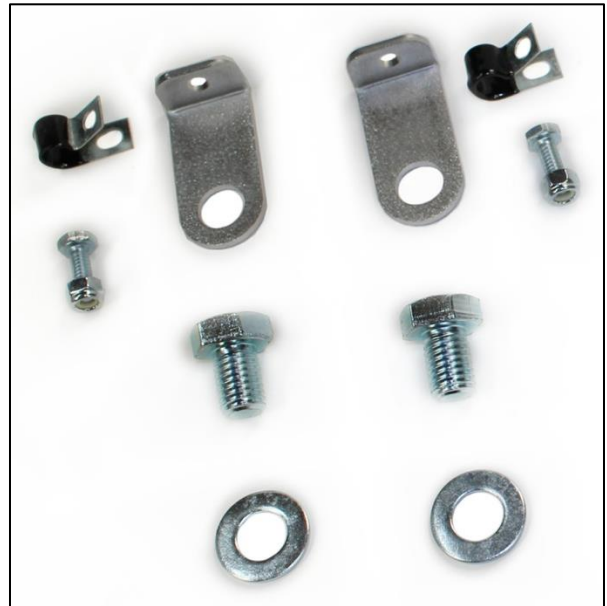

WARNING!

- *** Read all instructions thoroughly from start to finish before beginning the job! If these instructions are not properly followed, severe frame, suspension, tire, or body damage may result to the vehicle!
- *** WFO Concepts recommends that you exercise extreme caution when working under vehicles supported by jack stands.
- *** WFO Concepts recommends all installation to be performed by a professional shop/service technician. Product failure due to improper installation will not be covered under WFO's warranty policy.

TECH NOTES:

- This hardware kit is intended to firmly attach your brake line to the top of the 2005+ Ford axle C, so it doesn't interfere with other suspension components.
- This kit will only work if factory lower coil bucket retainer is removed.

INSTALL:

1. Make sure the lower coil bucket area on the C is clean of any debris.
2. Locate the L shaped aluminum bracket, P-clip, and the ¼" hardware. Look at the image below on the orientation of the P-clip. Slip the P-clip over your brake line. Make sure the bolt runs from the inside out with the P-clip in the vertical position.



3. Locate the M14 bolt and washer. Insert through the hole and into the axle's old coil bucket threaded mount.
4. ***Always double check clearances*** Make sure your brake line has enough slack that it will not bind or pinch from full lock to lock. As well as full droop to full compression.

